

 
Descaling the A200




01 Click on the "roller shutter" to call up the dashboard. The dashboard appears.




02 Tap on the Franke logo to switch to the Service Menu.

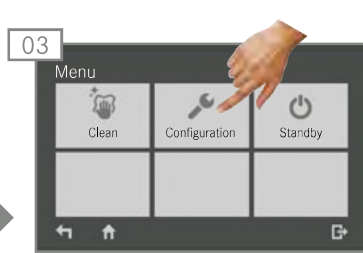

03 Press Configuration.

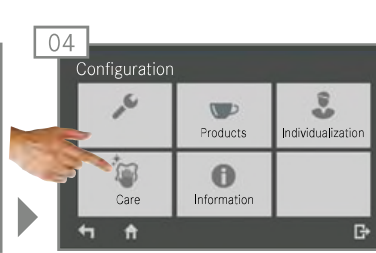 

 04 In the menu Configuration, select the menu item Care.

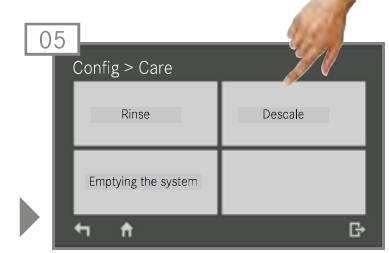

05 In the menu Config. > Care, select the menu item Descaling and confirm.



06 Descaling starts.

⚠ WARNING

Risk of scalding
During descaling, hot water and steam are released repeatedly.

- Do not touch the machine below the outlets or the outlets themselves.

⚠ WARNING

Skin and eye irritation
The descaler can cause irritations upon contact with skin or eyes.

 
- Observe the safety instructions on the packaging of the descaler
- Wear protective gloves and eye protection.



07 Follow the instructions on the display. Click Continue when a corresponding button appears. The machine guides you to the next step.



If you require a detailed guide for a certain step, you can find this under the **i** symbol in the bottom-right corner of the screen.

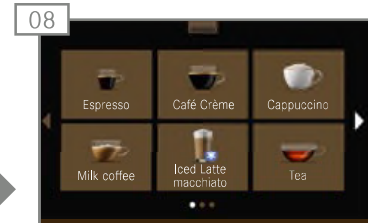

08 The machine is ready for service.