

# USER MANUAL S700

FCS4067

20106825 • 01 • 5/8/2018



**FRANKE**

## 9 CLEANING

### 9.1 Introduction

The perfect coffee experience depends on a perfectly cleaned coffee machine. Clean your coffee machine at least once a day and more frequently if necessary.



#### NOTICE

##### **Incorrect cleaning of the brewing unit**

Damage may occur if the the brewing unit is cleaned in the dishwasher.

- a) Clean the brewing unit rinsing it under tap water.



Soiled accessories can have a negative affect on the functionality of the machine and the quality of the drinks produced.

##### **Other areas to be cleaned:**

- Inner side of the door and lip seal
- Bean hopper



Rinsing is not a substitute for daily cleaning! Rinsing is necessary to remove residue build-up in the coffee system. The S700 automatically rinses after certain time intervals as well as when it is switched on or off.

### 9.2 Required cleaning accessory

#### 9.2.1 Cleaning accessories

- Cleaning tablets
- Microfiber cloth
- Brush set
- Cleaning container (for steam wand)
- Milk system cleaning agent (for steam wand)

### 9.3 5-step method

1. Remove coarse dirt with a brush or paint brush.
2. Soak the parts in hot water with a mild cleaner.  
Clean the inside of the milk hose with a brush.
3. Wash the parts.
4. Rinse the parts thoroughly.
5. Dry the parts.

### 9.4 Starting the cleaning process




The automatic cleaning process involves cleaning the coffee machine.


### 9.4.1 Starting cleaning via the Cleaning and Maintenance menu

#### Switch to the maintenance level

1. Tap the Franke logo.

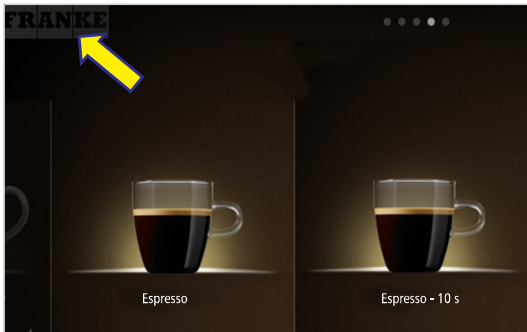


4. Select **Cleaning and maintenance**.

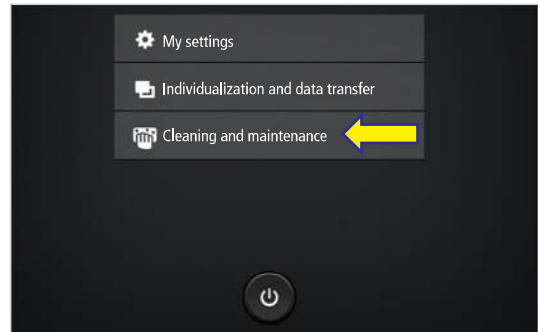

2. Enter the PIN. *PIN codes [▶ 37]*



5. Select **Clean coffee machine**.

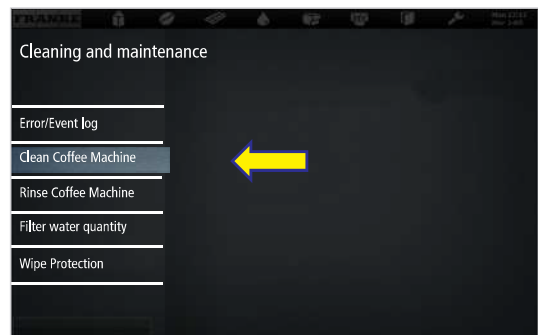

3. Press **OK**.

6. Confirm message with **Yes** to begin the cleaning process.

7. Follow the instructions on the operating interface and confirm the individual steps by selecting **Next**.

⇒ The machine shows the next step.



#### **WARNING**

##### **Risk of scalding**

Hot liquids and steam escape during cleaning and can lead to scalding.

- a) Keep hands away from the spouts and nozzles during this process.




When the cleaning cycle is complete, the machine either switches back to the maintenance level or the energy saving mode. Your service technician can set the desired option for you.

### 9.5 Cleaning the screen



You cannot cancel the locking function of the operating interface. The locking function lasts 20 seconds.

1. Tap the Franke logo.

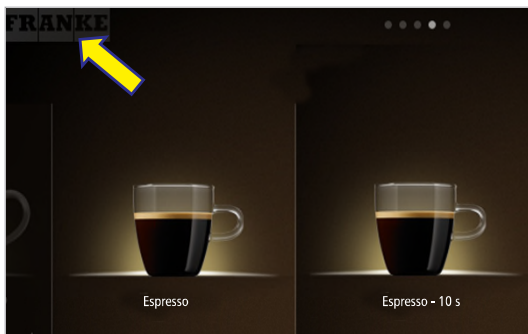


2. Enter the PIN. *PIN codes* [▶ 37]




3. Press OK..

4. Select **Cleaning and maintenance**.

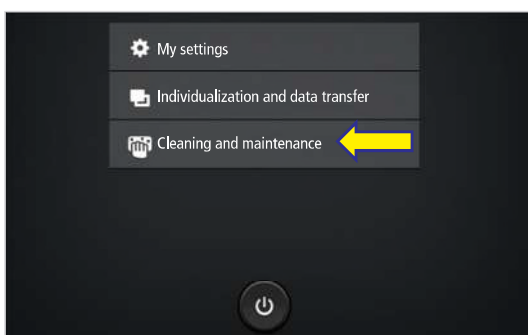


5. Select **Wipe Protection**.

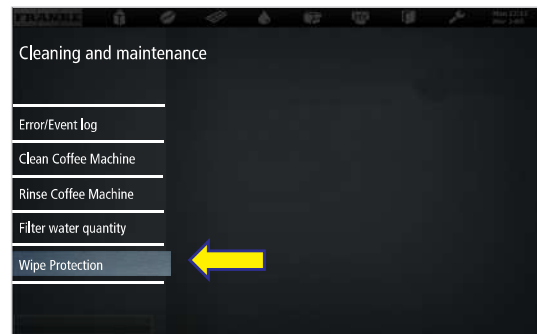

⇒ The operating interface is locked for 20 seconds.

6. Clean the screen.

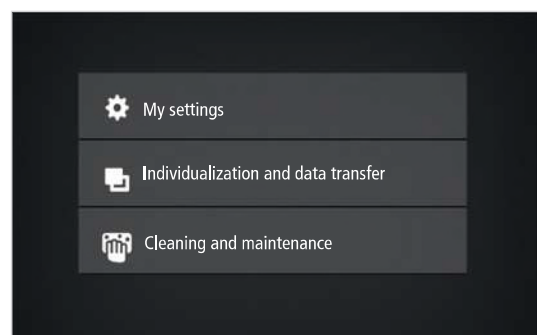

⇒ The maintenance level appears.

## 9.6 Cleaning the bean hopper



### NOTICE

#### Deterioration of coffee quality

Cleaners can alter the taste of the coffee.

a) Clean the inside of the bean hopper without using any cleaners.

✓ Dry cloth or cloth moistened with water

1. Remove the oil film on the inside of the bean hopper daily using a dry cloth or a cloth moistened with water.