

Make it wonderful

# Care of The A200 continued


## Descaling The A200



Click on the "roller shutter" to call up the dashboard. The dashboard appears.




Click on the Franke logo to switch to the Service Menu.

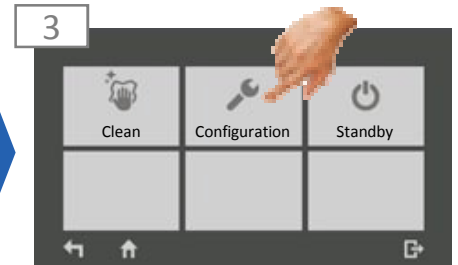


Press **Configuration**.



Descaling starts

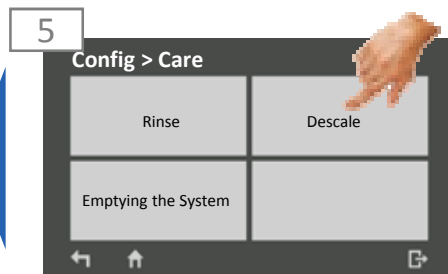

In the menu **Config. > Care**, select the menu item **Descaling** and confirm.

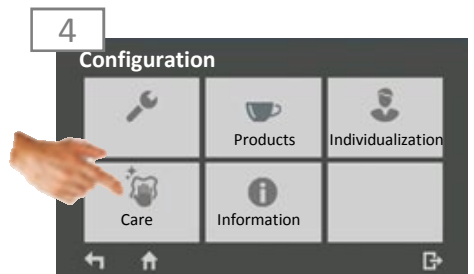

In the menu **Configuration**, select the menu item **Care**.

### **WARNING**

#### Risk of scalding

During descaling, hot water and steam are released repeatedly.


- Do not touch the machine below the outlets or the outlets themselves.

### **WARNING**


#### Skin and eye irritation

The descaler can cause irritations upon contact with skin or eyes. .

- observe the safety instructions on the packaging of the descaler
- Wear protective gloves and eye protection.

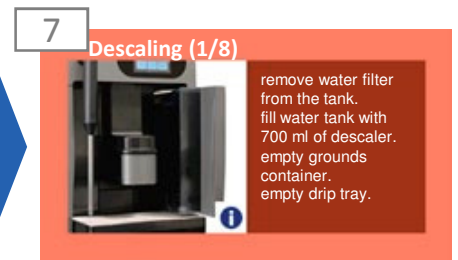

Follow the instructions on the display. Click **Continue** when a corresponding button appears. The machine guides you to the next step.

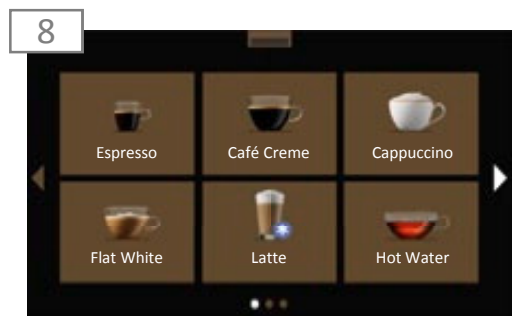

If you require a detailed guide for a certain step, you can find this under the **i** symbol in the bottom-right corner of the screen.